

A decorative graphic in the top left corner consisting of concentric, wavy lines in a golden-brown color, resembling the grain of wood.

WOOD FINISHES DIRECT



Finish. Finished.

The following Product Datasheet is provided by **Liberon**

Wood Finishes Direct cannot be held liable for the information contained within this document.

For purchasing information visit:
[Liberon Clear Garden Furniture Oil](#)



Garden Furniture Oil

- Feeds, seals and protects the natural beauty of exterior wood
- Contains ultra violet filters to reduce fading from sunlight
- Penetrates deep into the wood for long term protection
- Ideal for regular protection / maintenance
- Enhances the natural colour of the wood



USAGE

Exterior

COVERAGE

1 Litre

10-12 m²

APPLICATION

Brush or cloth

DRYING TIME

24 hours

TOOL CLEANING

White Spirit

Product use

Liberon Garden Furniture Oil is ideal for feeding, enhancing and protecting old and new wood. It can be applied to chairs, tables, gates and other exterior wood and contains UV filters to provide lasting protection from the sun.

Preparation

Ensure the surface is clean, dry and free from varnish or other finishes. Remove any surface mould and grime with Liberon Garden Furniture Cleaner as this may cause the timber to blacken when oiling.

Application

Shake well before use. Apply the oil using a brush or lint-free cotton cloth. Allow the oil to penetrate for up to 20 minutes and wipe the surface dry with a clean, lint-free cloth. Allow to dry for a minimum of 24 hours before applying more coats of oil.

We recommend a minimum of 3 coats are applied, more in exposed areas. Allow the oil to dry for 24 hours before using treated furniture.

Important: Oil finishes bring out the natural colours of timber. A wet surface will be an indication of the final colour. Always test product on a spare surface or inconspicuous area for colour, compatibility and end result.

Cleaning and maintenance

Clean surface dirt with Liberon Garden Furniture Cleaner before oiling. For continued protection all timber should be re-oiled once or twice a year as routine maintenance.

Precautions

- Not suitable for use on lacquered, varnished or painted surfaces.
- Wear protective gloves when applying Garden Furniture Oil.
- Store Liberon Garden Furniture Oil at a temperature above 5°C. Always replace the lid otherwise the oil can deteriorate.
- Oily cloths can self combust. Do not leave impregnated cloths in bundles. Before discarding lay them flat outside to dry to avoid a fire hazard.
- On exterior oak we recommend the use of Liberon Pure Tung Oil.

**Packaging**

Garden Furniture Oil is available in 500 ml and 1L containers.

Colours

Teak and clear

Health and Safety

Repeated exposure may cause skin dryness or cracking. Keep out of the reach of children. Do not empty into drains. Use only in well-ventilated areas. If swallowed, do not induce vomiting; seek medical advice immediately and show this container or label. Contains cobalt compound and methylethylketoxime. May produce an allergic reaction.