



**WOOD
FINISHES
DIRECT**



Finish. Finished.

The following Product Datasheet is provided by **Liberon**

Wood Finishes Direct cannot be held liable for the information contained within this document.

For purchasing information visit:
[Liberon Garden Furniture Cleaner](#)



Garden Furniture Cleaner for Wood

- Removes dirt, mildew and grime from exterior wood
- Helps to remove black spotting caused by mould and lichen
- Eliminates food stains and grease marks
- Water based formula



USAGE

Exterior

COVERAGE

1 Litre

30 m²

APPLICATION

Scrubbing
brush

DRYING TIME

24 hours

TOOL CLEANING

Water

Product use

Liberon Garden Furniture Cleaner is ideal for cleaning old, tired and dirty wooden garden furniture which has dulled and faded over time. It helps to remove black spotting caused by mould or lichen from most types of wood and thoroughly prepares the timber for re-oiling. It also helps prevent the re-growth of fungi, keeping the timber looking its best for longer.

Product application

Shake well before use. Dilute the Garden Furniture Cleaner with up to 2 parts water in a bucket. Apply the cleaner using a scrubbing brush, rinse with clean water and wipe the timber dry. Repeat as required until the timber is clean.

Allow the timber to dry for a minimum of 24 hours before applying Liberon Garden Furniture Oil.

For stubborn marks, a stronger solution of Garden Furniture Cleaner may be required.

Important: Always test product on a spare surface or inconspicuous area for compatibility and end result.

Maintenance

Clean the wood as and when required.

Packaging

Garden Furniture Cleaner is available in 1L containers.

Health and Safety

Keep out of reach of children. Do not empty into drains. Use only in well ventilated areas. Do not allow to freeze.