



WOOD FINISHES DIRECT

The following Product Datasheet is provided by **Woca**

Wood Finishes Direct cannot be held liable for the information contained within this document.

For purchasing information visit:

[Woca Wood Lye](#)



1 PREPARE 2 TREAT 3 MAINTAIN

WOOD LYE



wood

For all types of wood

Minimises the natural yellowing process of the wood. Contains white pigments. Especially suitable for hardwood.



appearance

High efficiency

For a lighter finish. Emphasises the natural grain for a more attractive look. Water-based.



application

Easy to apply

Easy and fast to apply with a WOCA Applicator, nylon brush or roller.



treatment

For pre-treatment

Cannot be used alone as it only provides colour to the wood, and not protection. Requires subsequent treatment with oil, lacquer or soap.



PRODUCT DESCRIPTION

Wood Lye is used for priming of unfinished or newly sanded interior woodwork i.e. floor, stairs, furniture and panels. The priming minimizes the yellowing of the wood and enhances the wood grain, creating a coloured wash effect, depending on the chosen colour. Wood Lye may be used on all types of wood.

APPLICATION AREA

Used for priming of unfinished and newly sanded interior wood. Ideal for all types of wood.

Product information

Coverage: 8-10 m²/L

Packaging: 2.5 L

Colours: White and Grey






WORK DESCRIPTION

Preparation

The unfinished woodwork must be clean, dry and finely sanded [grit 100-120] before applying the lye.


See safety data sheet for further information.

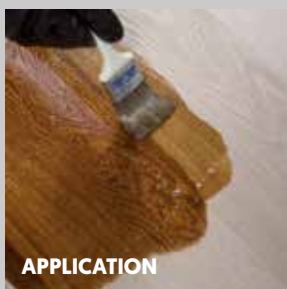

APPLICATION



SANDING

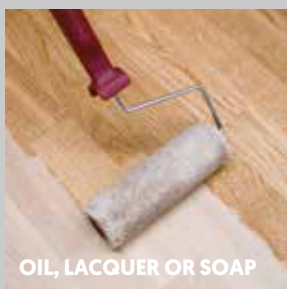

OIL, LACQUER OR SOAP

TREATMENT

- 1 Shake the container well and pour the lye into a plastic bucket. It is important that no pigments are left in the container. Stir regularly during the application to prevent the pigments from settling to the bottom.
- 2 Apply an even coat of the lye with the WOCA Applicator, a nylon brush or roller lengthwise along the grain. Apply at least 1 L of lye per 10 m² of wood. Leave wood to dry for approx. 8-12 hours at 20°C.
- 3 De-nib standing fibres and remove excess pigments with a medium e.g. green or bordeaux, sanding polishing pad. Remove the sanding dust with a vacuum cleaner.
- 4 Finish the wood surface with a WOCA oil, lacquer or soap.